



Instruction Manual





Start using



App Installation on smart phones

1. Download and install Goodcam in the Apple Store for the IOS system and GooglePlay for the Android system. For your convenience, please scan the QR code below to download and install Goodcam. If your device can't connect to GooglePlay, please scan the APK QR code below to download and install Goodcam.



Goodcam

IOS APP Store

Google Play

2. Click "+" to configure a new camera and connect it to WiFi. Note: When using the camera for the first time, please connect the smart phone to the 2.4 G WiFi router first. Then configure the camera and connect it to WiFi according to the following steps.

	Device list	Q	\oplus	K Back	Add Camera	Back Add Camera
				AP	AP distribution network Configure WiFi for signals from mobile phones and devices	
	Add new camera			Device code scanning distribution network Device scan QR code on mobile phone to configure WiFi	♥ HI TEC	
				Add online device Add devices that are already connected to the network	Before configuring the network,please ensure the device is power on and in match. Ensure that the router is 2.4G and the password is entered correctly, otherwise the device will not be able to	
			46	4G device add 4G network device add	successfully distribute the network.	
						Just support 2.4GHz Learn more
Device	File	E M	S e			Next

\leftarrow wlan	:		Device list	Q \oplus		
WLAN		Q Camera				
Encrypted				1-		
MERCURY_5G_2DB9 Encrypted	()					
NMS Open	(î•		Contraction			
After connecting the NMS	((·	Ø				
hotspot, note: be sure to		Setting Clo	oud record Playback	Edit		
return to the APP	?					
703 Encounted						
ChinaNet-jUn6 Encrypted (WPS available)	?					
MERCURY_6232 Encrypted	() 					
WAYOS Encrypted		Pevice	-) File	A		

FAQs

Q1: Why can't I search and detect cameras/configure networks with the APP?

A: Please confirm that your device is connected normally and check whether the APP permission is restricted.

Q2: Why does the camera always require the username and the password, or prompt an incorrect user?

A: The default password for the camera is 6666. If you forget the username or password, you can restore the camera to the factory settings, thus obtaining the default username and password.

Q3: How can I restore my camera to the factory settings?

A: Please press the reset button of the camera for about 5 seconds until the camera restarts.

Q4: Why is the image blurred?

A: Remove the protective film of the lens. If it is still blurred, please rotate the lens of the camera and focus it. After that, you can get a clear image.